



QUALIFIER

Which **Step** is right for you?



2017 **PRODUCT**
of the **YEAR**

The StepAbove® entry steps will make coming home to your RV easier on you. The entry steps store in the doorway of your RV during travel and flip down at the campsite to provide a solid, comfortable entry and exit. An optional handrail is available for added security on units with 3 and 4 steps.

Multiple StepAbove® models offer a stable entry for trailers with a variety of heights and door widths. By taking the simple measurements on the next page, the Fit Chart will help find the StepAbove® that works best for you. Be sure to review the Other Items to Consider to guarantee a proper fit.



Step 1

MAKE SURE YOUR UNIT IS LEVEL TO ENSURE ACCURATE MEASUREMENTS.



THRESHOLD


Make sure the rise of your threshold is between 5/8" and 3/4". If it is greater or less than either of these measurements, the door may not close properly.

If your unit doesn't meet the specifications in STEP 1 or STEP 2, modifications WILL NEED to be made. Please call the MORryde sales department for further assistance. 574-293-1581


Step 2

HINGE PLATE

You must have a gap of 3/8" from the bottom of your entry and screen doors to the top of the threshold to allow room for the hinge plate. Without this clearance, your door will not have sufficient room to close while the steps are down.

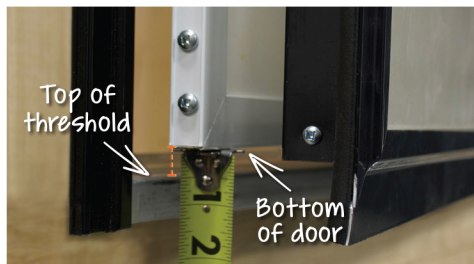

Step 3

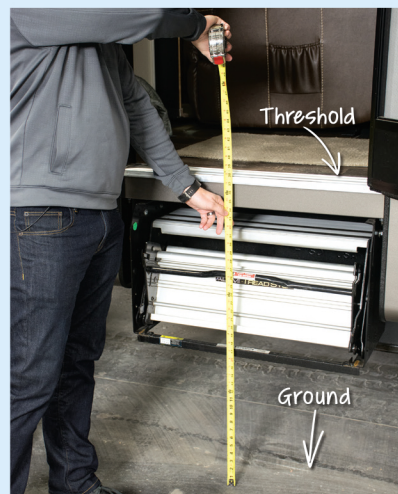

STEP HEIGHT

Find your step height by measuring from the top of the threshold to the ground.

Step 4

DOOR WIDTH



Find your door width on the factory label located on the side or edge of the door.

If there is no label, then measure inside, at the base of the door, from flange to flange and refer to the Fit Chart for the door width. Keep in mind that the flange to flange measurement needed is the narrowest part of the entry door.



OTHER ITEMS TO CONSIDER...

DOOR JAMB TRIM



If there is trim on the back side of the door jamb that protrudes, it will interfere with the latch on the step. The trim will need to be notched 1/4" - 1/2" to accommodate the latch.

STRUTS



If the door has a strut that prevents it from opening all the way, the step will hit the door. The strut must be removed for proper step installation.

SKIRTING



The skirting below the threshold cannot stick out more than 3/4".

HANDRAIL



If there is anything on the left side of the entrance of your door within 33", you will need to remove the handrail before stowing the steps.

AFTERMARKET ACCESSORIES

Aftermarket accessories such as a storm door or a grab handle could cause interference with the step and may need to be removed or altered for proper installation of the StepAbove®.

STEPABOVE® FIT CHART

	PART NUMBER*	STEP HEIGHT	STEP RISE	DOOR WIDTH Size from Factory Label	—OR—	DOOR WIDTH Size from Flange to Flange
2 STEP	STP-2-24-09H	25" – 29"	9"	24"		21.75" – 22.25"
	STP-2-27-01H	25" – 29"	9"	26" – 28"		23.75" – 26.25"
3 STEP	STP-3-24-30H	30" – 33.5"	8"	24"		21.75" – 22.25"
	STP-3-24-21H	34" – 36"	9"	24"		21.75" – 22.25"
	STP-3-27-02H	30" – 33.5"	8"	26" – 28"		23.75" – 26.25"
	STP-3-30-03H	30" – 33.5"	8"	30" – 32"		27.75" – 30.25"
	STP-3-27-05H	34" – 36"	9"	26" – 28"		23.75" – 26.25"
	STP-3-30-04H	34" – 36"	9"	30" – 32"		27.75" – 30.25"
4 STEP	STP-4-27-05H	36.5" – 42"	8"	26" – 28"		23.75" – 26.25"
	STP-4-30-03H	36.5" – 42"	8"	30"		27.75" – 28.25"
	STP-4-32-04H	36.5" – 42"	8"	30" – 32"		27.75" – 30.25"

STEPABOVE® ACCESSORIES



3 STEP HANDRAIL
STP214-029H

4 STEP HANDRAIL
STP214-006H



STORAGE BOX
SP54-099

* Please note: the step part number does not correspond with the width of the step.

